
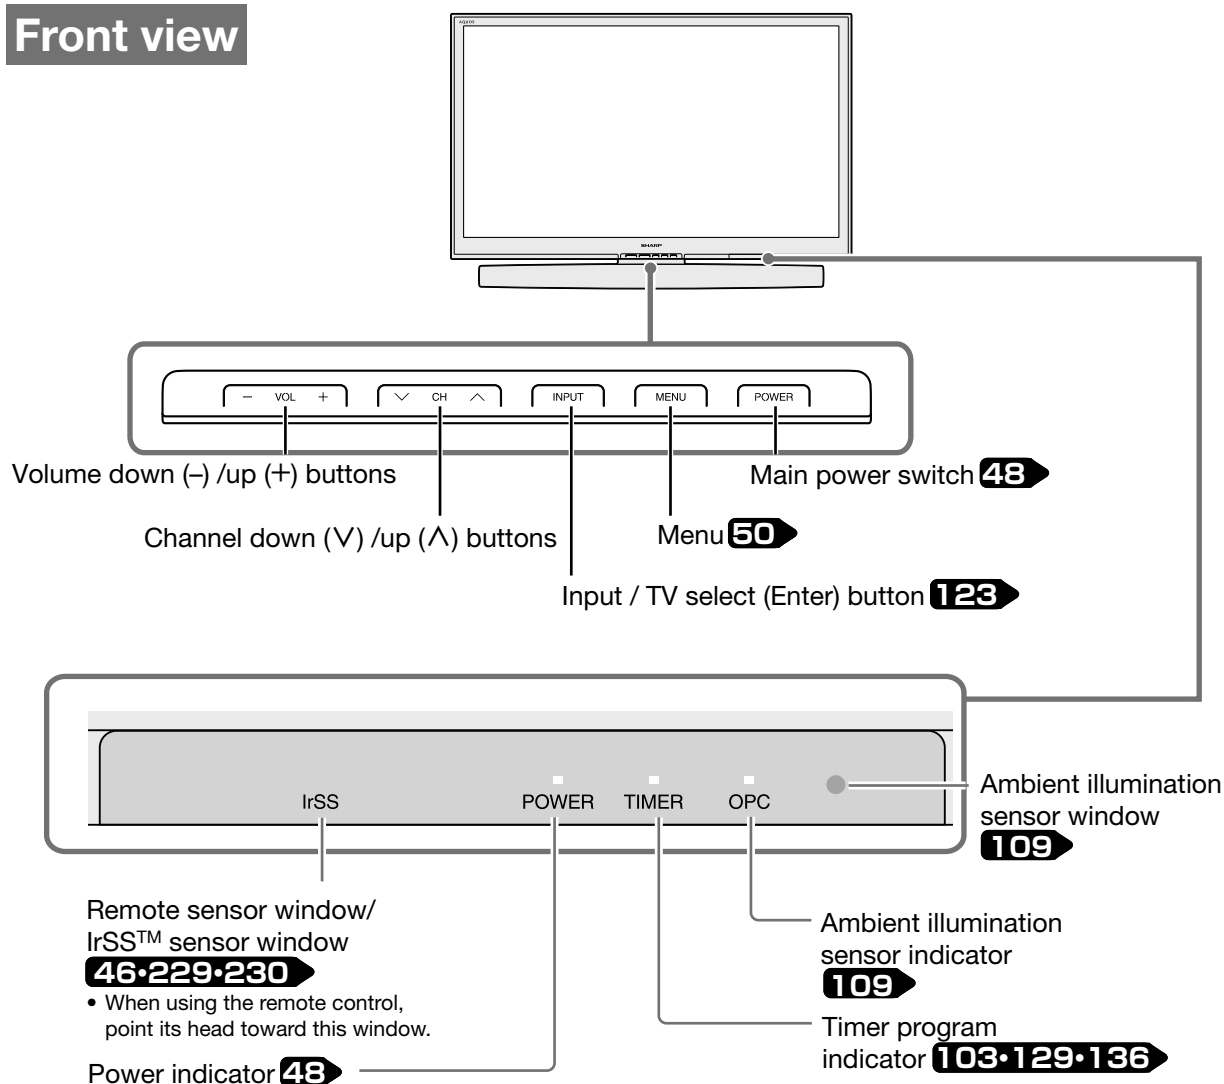



Part Names – Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view





Back view

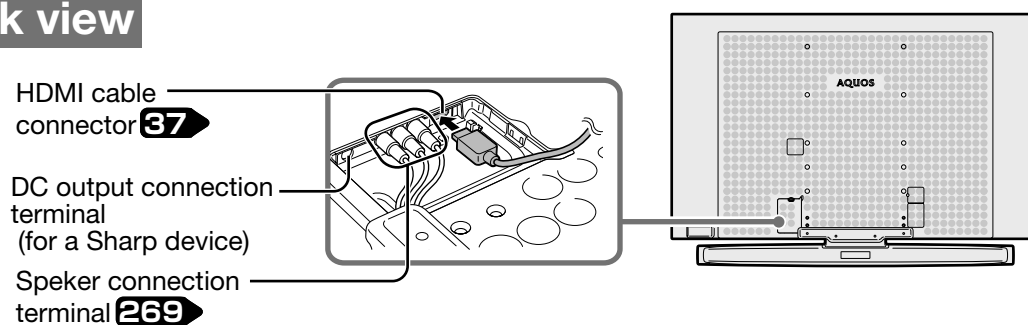

Side view

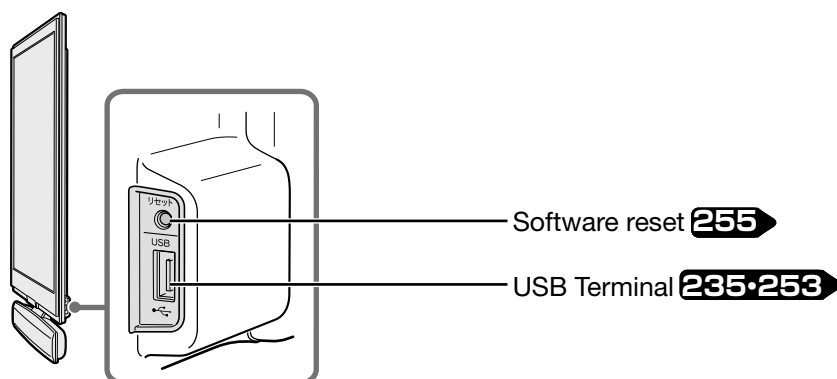

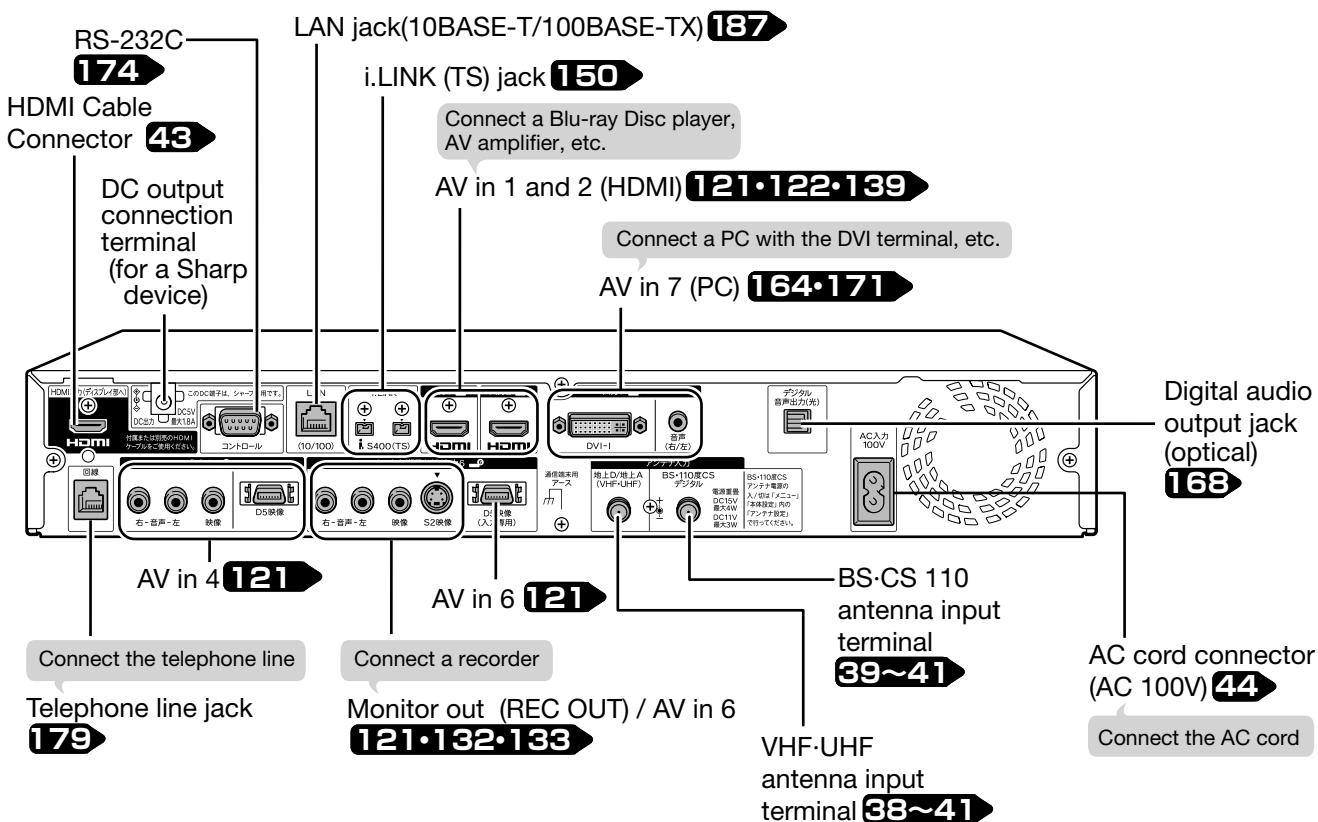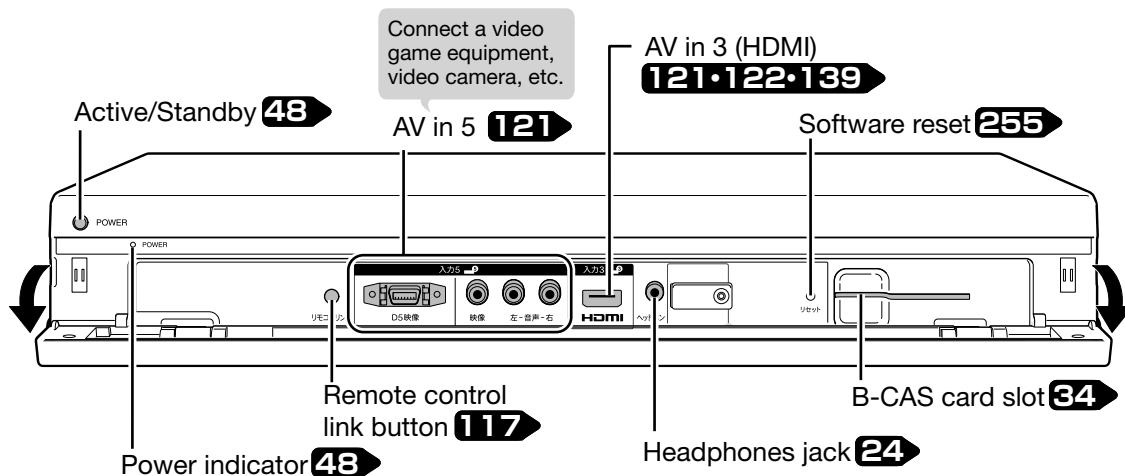

はじめに

準備

番組を見る

録画と再生

ファミリンク
で録画・再生

パソコンゲーム
機をつなぐ

インターネット
を楽しむ

インターネット
で番組を楽しむ

写真の表示と
印刷

故障かな仕様・
寸法図など

English
Guide

Part Names – Remote Control Unit

Active/Standby 48

Press to engage the TV set in the active or standby mode.

CATV

CATV 86

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

3桁入力

Digital channel number input 85

Use to select a digital channel by entering the 3-digit channel number.

地上A Terrestrial analog select 78

地上D Terrestrial digital select 78

BS BS select 78

CS CS select 78

Select the CS digital channel for the first time. 57

消音 Mute 79

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

+音量 Volume up (+)/down (-) 79

Press to adjust the volume.

Linked data broadcast 102

Press to call the data broadcast linked with the current digital TV program.

AV mode select 107

Press to select the picture/sound setting that best matches the current program.

番組表 EPG 90・92

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

裏番組 Other on-air programs 91

Press to display the EPG for currently on-air programs only (裏番組).

番組情報

Program info 101

Press to display detailed information on the current digital program.

Finish 50

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

お好み登録

Favorite channel select/register 87

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

映像切換

Picture select 97

Press to select the desired picture when watching a digital multi-picture program.

字幕

Caption 97

Press to display, select, or turn off captions when watching a digital program with captions.

音声切換

Audio select 96・97

Press to select the desired audio.

画面サイズ

Screen mode 105・165

Press to select the desired screen mode.

ピクチャー

Picture 233

Press to display a picture saved in this unit or an image saved on a USB memory stick.

画面表示

Display 83

Press to display or turn off the channel call, etc.

インターネット

Internet 192・208

Press to connect to the internet.

i.LINK

i.LINK 152

Press to display the i.LINK control panel.

VOD

VOD 217・221

Press to display the VOD control panel.

Channel select 79

- Press to select a channel.
- Use to input a number for various settings.

Channel up (^)/down (v) 79

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

入力切換

Input select 123

Press to select the desired input.

Media select 78

Press to select the desired media (TV or data).

Sleep timer 250

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

Menu 50

Press to display or turn off the menu screen.

The menus can be displayed in English. See 283 for instructions on how to switch the display language.

Cursor (up, down, left, right) 50

Use to select a menu item, column, etc.

決定 Enter/Confirm 50

Press to confirm a selected setting or menu item.

Return 50

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

青

赤

緑

黄

Color 92・93

Use to operate EPGs and data program screens.

静止

Freeze 100

Press to freeze the picture.

2画面

Split screen 98

Press to switch between the split screen mode and the normal screen mode.


操作切換

Operable screen 98

Press to switch the operable screen when the TV set is in the split screen mode.


Familink 142・144・148・149

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

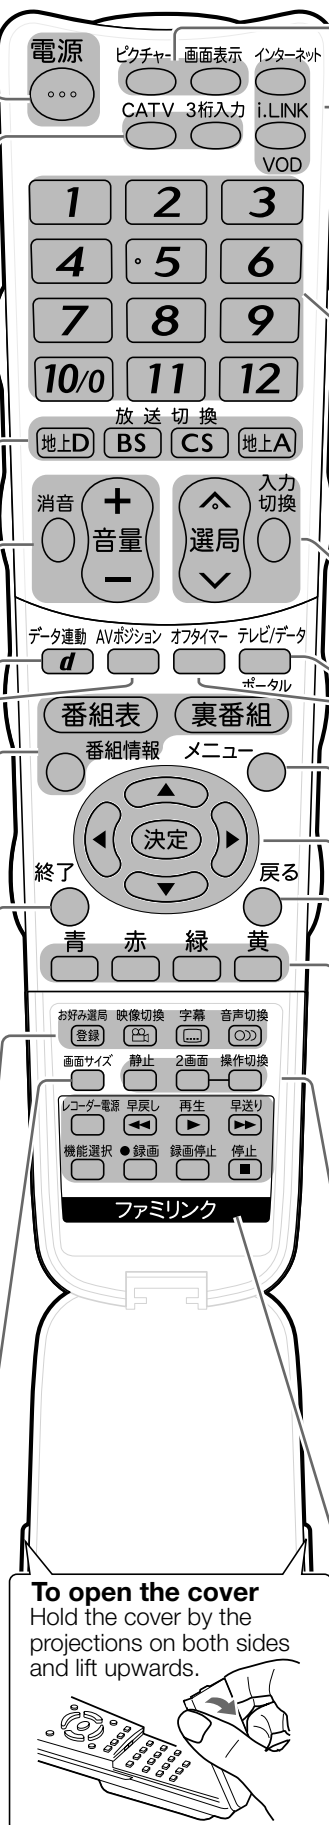

To open the cover


Hold the cover by the projections on both sides and lift upwards.

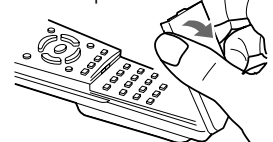

Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。

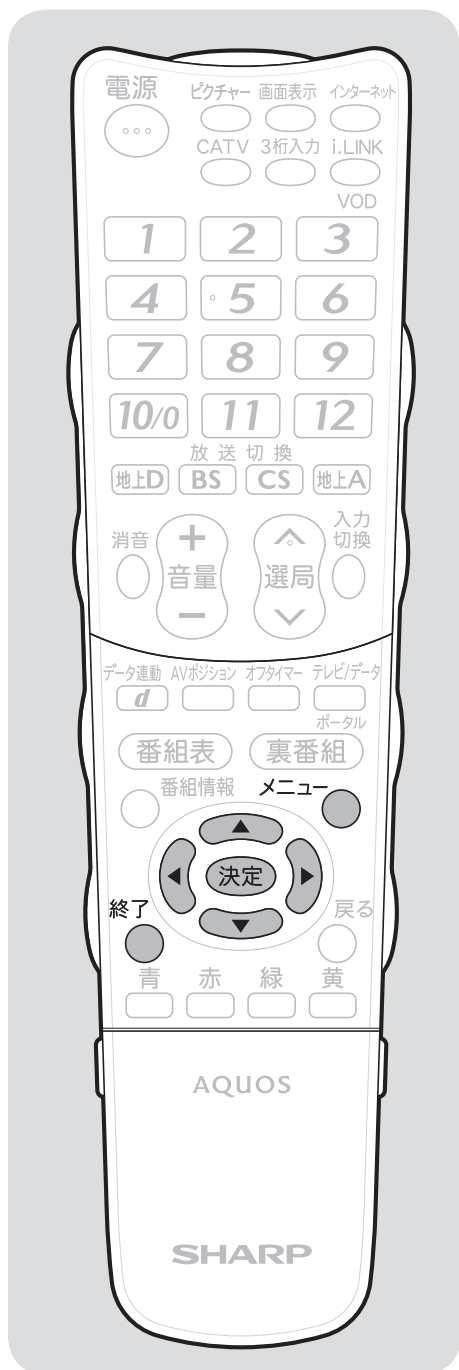

1


メニュー

Display the menu screen.
メニューを表示する

2




Select “本体設定” (Setup) — “Language (言語設定)” .
「本体設定」 — 「Language (言語設定)」
を選ぶ
Enter.
決定する

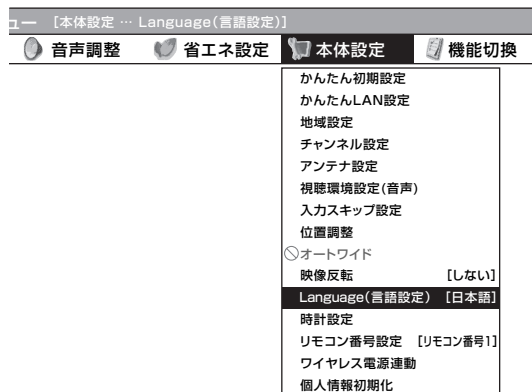

3



Select “English” .
「English」を選ぶ
Enter.
決定する

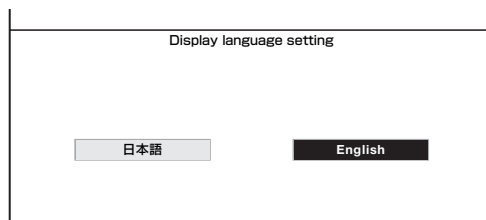

- The menu screen is now displayed in English.
- 画面表示が英語になります。

4

終了

Finish this operation.
終了する

はじめに

準備

番組を見る

録画と再生

ファミリーリンク
で録画・再生

パソコンゲーム
機をつなぐ

インターネット
を楽しむ

インターネット
で番組を楽しむ

写真の表示と
印刷

故障かな仕様
寸法図など

English
Guide



おしらせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」 — 「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。